



This new template will work for both the $\frac{5}{8}$ " and $\frac{3}{4}$ " thick closet systems.

Also note that this template is for 14" deep partitions. The hinge plates will install in the front system holes on the 20" and 24" deep partitions and therefore do not require a template or additional drilling.

Instructions:

Doors with 2 Hinges

- Insert pins into 1st and 4th hole above or below the fixed shelf with pilot holes facing the front of the panel
- Drill 2 holes with self-centering drill bit
- Repeat for each hinge location
- Screw on mounting plates and attach door

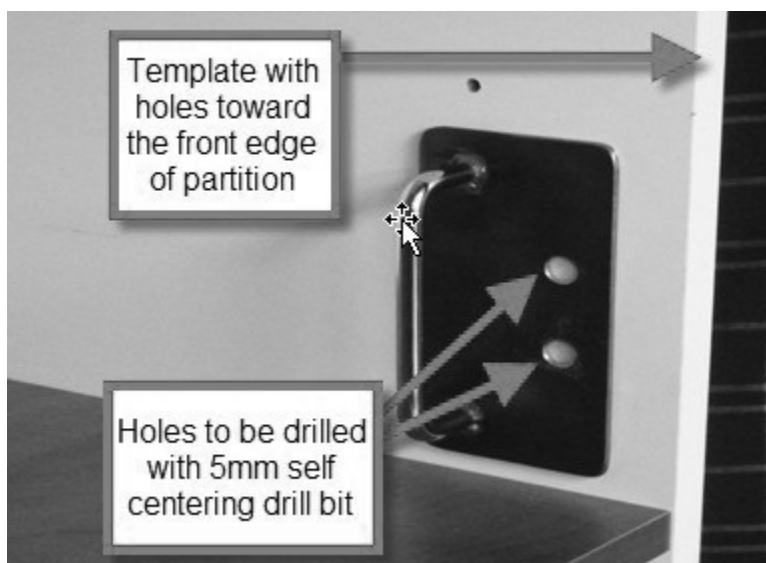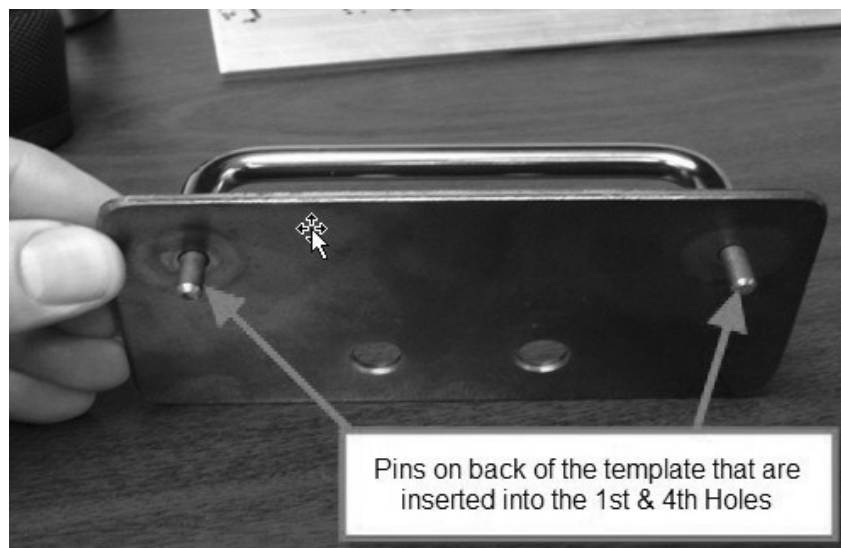

Doors with more than 2 hinges

- Install the top and bottom hinge plates on the partitions using instructions above
- Install hinges in the top and bottom locations of the door
- Install the door using just the top and bottom hinges.
- Locate the template where the middle hinges will fall and drill accordingly
- Attach hinge plates to partitions
- Connect middle hinges